



XX  
A

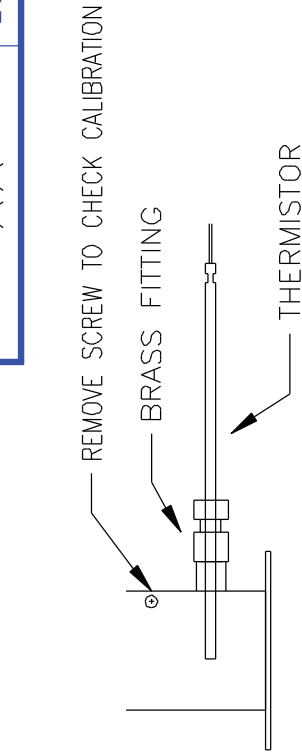

TO CALIBRATE THE REGEN HEATER THERMISTOR, REMOVE THE SAMPLE SCREW AND INSERT A EXTERNAL TEMPERATURE PROBE. FIND THE HOTTEST TEMPERATURE IN THE TUBE. LOOSEN THE BRASS FITTING AND MOVE THE THERMISTOR IN AND OUT UNTIL THE TEMPERATURE READ-OUT IS THE SAME AS THE EXTERNAL PROBE. SNUG THE FITTING ONTO THE PROBE.DO NOT OVER TIGHTEN THE FITTING.  
 TO CALIBRATE THE PROCESS, POKE A HOLE IN THE HOSE CONNECTED TO THE PROCESS BOX TO CHECK THE TEMPERATURE WITH AN EXTERNAL PROBE.

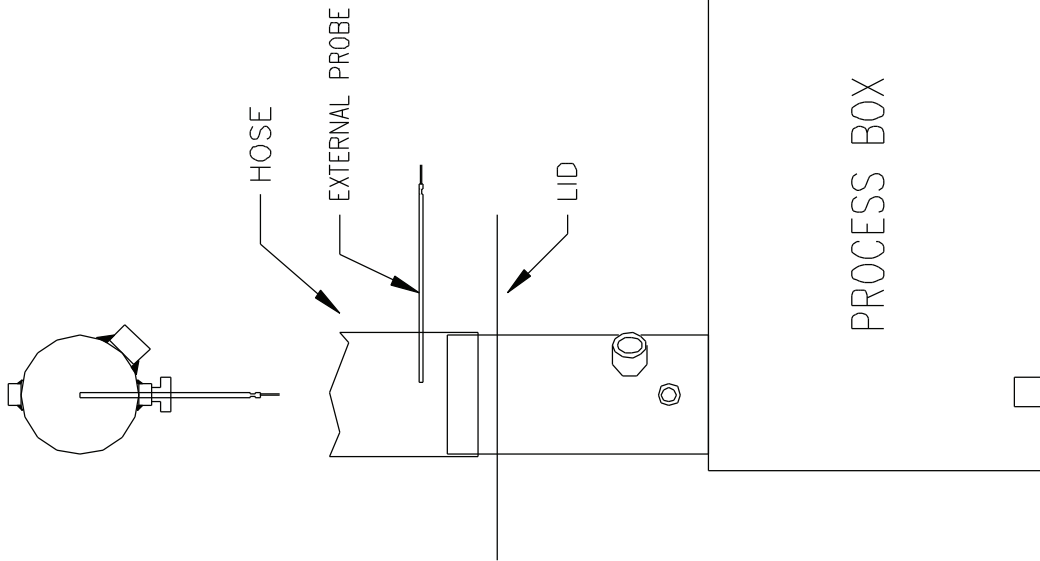

SYM. AM'T	PART NO.	DESCRIPTION
XX		
XXX		
<b>THORESON McCOSH</b>		
W5649 COUNTY ROAD 342 WALLACE, MICHIGAN		
PH. 906-914-4180 FAX:906-914-4179		
SCALE	DATE	DR. BY
NOT TO SCALE	00-00-00	GLK
		DRAWING NO.
		XX

REVISION

DESCRIPTION	DATE	MK.